


# ELECTRICAL CONDUIT LOCATION IN CONCRETE



If you would like to bring the electrical up into the equipment area from a concrete slab, use these measurements for your model.

## PREFERED OPTION

Bring in the electrical through the holes on either side of the cabinet. About 10-14" back

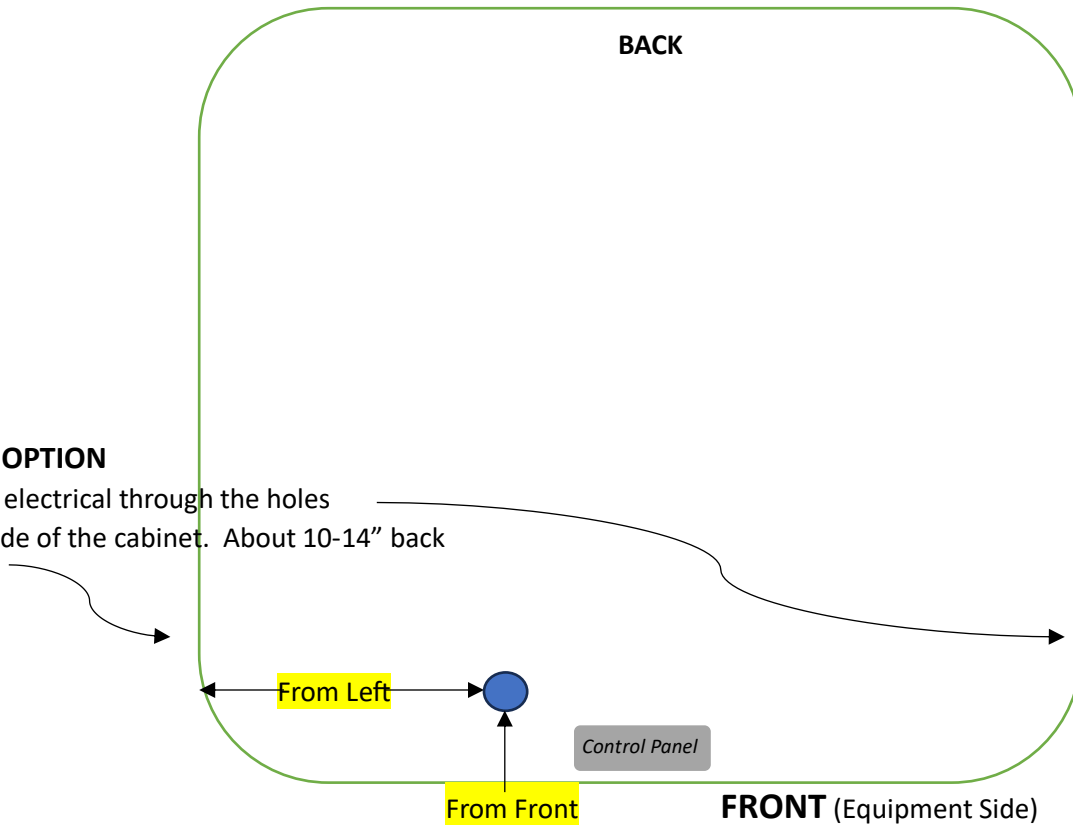

MODEL	FROM LEFT	FROM FRONT
Clairmont/ Kingston	43 ½"	3 ½"
Aspen/Maxxus	?	?
Optima/Cameo	35"	5"
Altamar	21"	4"
Marin	33"	5"
Capri	?	?
Hamilton/Chelsee	25 ½"	5"
Bristol	27"	5"
Montclair	22"	5"
Dover	26"	5"
McKinley/Ramona	?	?
Peyton/Edison	28"	6"
Prado	30"	5"
Alicia	?	?